





Ruote



www.italiancar.com



|

--

/

**Ruote**



www.ruote.it



CPU  
CPU

CPP

CPU

CPU

/

CRC

show mac-address-table count  
show run

# CPU

```
show cpu      cpu
```

```
Ruijie#show cpu
```

```
=====
CPU Using Rate Information
CPU utilization in five seconds: 10.20%
CPU utilization in one minute: 8.40%
CPU utilization in five minutes: 8.40%
```

show	CPU
CPU utilization in five minutes	50%
CPU	70%

4008-111-000



CPU

CPP

CPU

CPU

show cpu-protect

cpu

drop

2-3

show cpu-protect)

show memory

Ruijie#show memory

System Memory: 253952KB total, 52940KB used, 201012KB free, 20.8%  
used rate

Used detail: 34396KB active, 14000KB inactive, 14776KB mapped, 5472KB  
slab, 5012KB core, 0KB others


75%

80%

4008-111-000

```
Interface : GigabitEthernet 0/1
 10 seconds input rate :0 bits/sec, 0 packets/sec
 10 seconds output rate :0 bits/sec, 0 packets/sec
RX load:
dropped packet events (due to lack of resources): 0
packets received of length (in octets):
 64 : 0
 65-127 : 0
 128-255 : 0
 256-511 : 0
 512-1023 : 0
```

每秒由报文递增的比率，可以帮助快速发

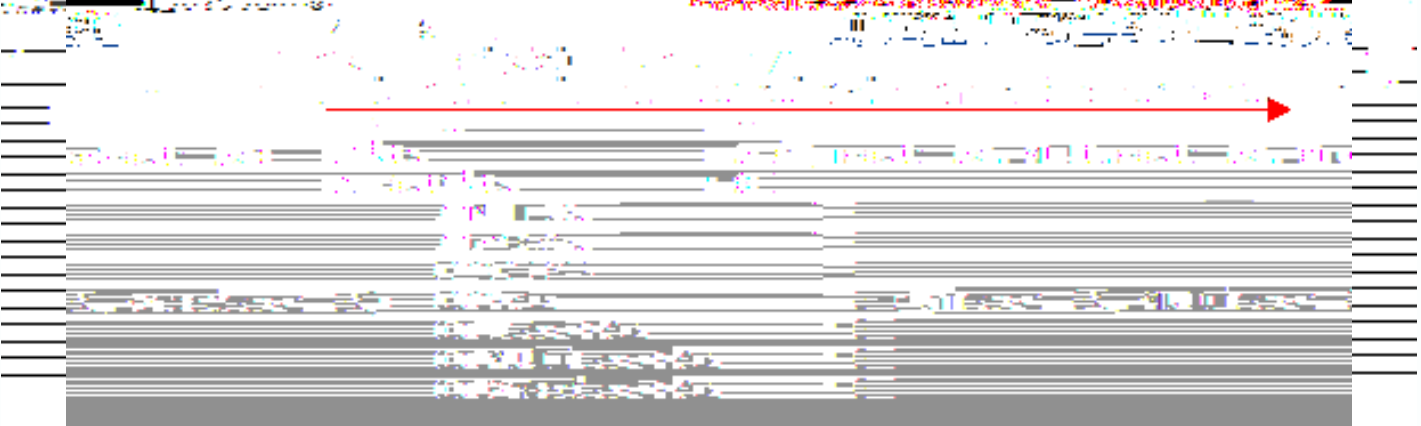



show log

Ruijie#show log

\*Jan 1 00:00:15: %LOCAL\_DP-5-LC\_PROB: Board information in this chassis has been collected.

\*Jan 1 00:00:15: %SWITCH-6-INSTALL: Install chassis S1920-8GT2SFP on switch 1

\*Jan 1 00:00:15: %DP-6-MASTER: Module in slot 0 has td ed to master.

show log



MAC            SNC    RIIL                    CPU  
                  ARP                                    TRAP

MIB                                    MIB                                    4008111000  
    OID





console

console

PC

COM

Console

console

status

PC

9600

COM

COM

console



**Ruote**



www.italiancar.com



AP

show aggregateport load-balance  
balance

AP  
aggregateport load-





/

)

/

PING

SNMP

10.X

S86 S12000

4008111000

```
Ruijie#show version detail //
Ruijie#show version slot //
Ruijie#show run //
Ruijie#show cpu // cpu
Ruijie#show cpu-protect // cpu 2
Ruijie#show memory //
Ruijie#show interface 3-5 show
```

[www.ruijie.com.cn](http://www.ruijie.com.cn)

[www.ruijie.com.cn/service.aspx](http://www.ruijie.com.cn/service.aspx)

[support.ruijie.com.cn](http://support.ruijie.com.cn)

[webchat.ruijie.com.cn](http://webchat.ruijie.com.cn)

4008-111-000